





ICETHK User's Manual

Version 1

Andrew M. Tuthill, James L. Wuebben, and John J. Gagnon

September 1998

19981029 005

Epproved for public release:
Distribution Unlimited

Reproduced From Best Available Copy Abstract: This report describes the ICETHK computer model that is used in conjunction with the HEC-2 backwater model to simulate equilibrium ice jam profiles. The ICETHK model fulfills an important need in studies that require the calculation of ice-jam-affected stage. This report presents the theory and limitations of ICETHK and serves as a user's manual, and concludes with a discussion of river ice modeling using ICETHK.

How to get copies of CRREL technical publications:

Department of Defense personnel and contractors may order reports through the Defense Technical Information Center:

DTIC-BR SUITE 0944

8725 JOHN J KINGMAN RD

FT BELVOIR VA 22060-6218 1 800 225 3842

Telephone

help@dtic.mil E-mail msorders@dtic.mil

http://www.dtic.mil/ WWW

All others may order reports through the National Technical Information Service:

NTIS

5285 PORT ROYAL RD

SPRINGFIELD VA 22161

1 703 487 4650 Telephone

1 703 487 4639 (TDD for the hearing-impaired)

orders@ntis.fedworld.gov E-mail

www http://www.fedworld.gov/ntis/ntishome.html

A complete list of all CRREL technical publications is available from

USACRREL (CECRL-LP)

72 LYME RD

HANOVER NH 03755-1290

1 603 646 4338 Telephone

E-mail techpubs@crrel.usace.army.mil

For information on all aspects of the Cold Regions Research and Engineering Laboratory, visit our World Wide Web site: http://www.crrel.usace.army.mil

Special Report 98-11



ICETHK User's Manual

Version 1

Andrew M. Tuthill, James L. Wuebben, and John J. Gagnon

September 1998

Prepared for OFFICE OF THE CHIEF OF ENGINEERS

PREFACE

This report was prepared by Andrew M. Tuthill and James L. Wuebben, Research Hydraulic Engineers, and by John J. Gagnon, Research Technician, Ice Engineering Research Division, Research and Engineering Directorate, U.S. Army Cold Regions Research and Engineering Laboratory (CRREL), Hanover, New Hampshire.

The initial version of ICETHK was written in the QUICK BASIC programming language by Mr. Wuebben and Mr. Gagnon. The current FORTRAN version of ICETHK was prepared by Mr. Tuthill.

The work was funded by Civil Works Program Work Unit 32822, *Inclusion of Ice Effects in Corps Numerical Programs*. Dr. Jon E. Zufelt and Kathleen D. White porved as technical reviewers.

This publication reflects the personal views of the authors and does not suggest or reflect the policy, practices, programs, or doctrine of the U.S. Army or Government of the United States. The contents of this report are not to be used for advertising or promotional purposes. Citation of brand names does not constitute an official endorsement or approval of the use of such commercial products.

CONTENTS

	Page
Preface	ii
Introduction	1
Equilibrium ice jam theory and ICETHK	2
Definition of an equilibrium ice jam	2
Ice thickness calculation	2
Roughness of the ice accumulation	3
Ice in overbank areas	4
Structure and operation of ICETHK	4
Inputs	6
Outputs	8
Using ICETHK	9
Loading ICETHK	9
Running ICETHK	10
River ice modeling with ICETHK	10
Limitations	10
Ice jam location	11
Calibration to observed ice conditions	11
Ice jam volume and ice supply	12
Construction of ice-affected rating curves	12
Literature cited	13
Appendix A. Conventional input file to ICETHK: PARA.DAT	15
Appendix B. Sample of the file OBI.DAT containing user input ice	
thickness in the overbank areas	16
Appendix C. Sample of the file RUF.DAT containing user input ice	
roughness data	17
Appendix D. Sample of the file RUFMULT.DAT, used to calibrate the	
ICETHK model	18
Appendix E. Sample of the original HEC-2 input file, WINDN.DAT	19
Appendix F. Sample HEC-2 input file created by the ICETHK program,	
WINDN5.DAT	20
Appendix G. Sample of ICETHK summary output file FIN.DAT	21
Appendix H. Sample of ICETHK output file FIRST.SMP	22
Appendix I. Sample of ICETHK output file LAST.SMP	23
Appendix J. Sample spreadsheet created from ICETHK output file	
OPDAT	24

	Page
Appendix K. Typical spreadsheet file produced from ICETHK output file PROFILE.DAT	25
Appendix L. Listing of output files included in this release of the	
ICETHK program	26
Abstract	27
ILLUSTRATIONS	
Figure	
1. Schematic profile of an equilibrium ice jam	1
2. Nezhikovskiy's data plotted in log-log format with the ice-	
thickness-to-ice-roughness relationships used in the	
ICETHK model	4
3. Structure of the ICETHK model	5
4. Ice thickness convergence of successive HEC-2/ICETHK	_
iteration cycles	9
5. Ice jam profile produced by importing ICETHK output file,	10
PROFILE.DAT, into a spreadsheet	10
Discharge hydrograph for the Winooski River at Montpelier, Vermont, during the 11 March 1992 breakup ice jam	12
7. Ice jam rating curve for the Winooski River at Montpelier,	12
Vermont, calculated using HEC-2 and ICETHK	13
verificiti, calculated using TEC-2 and Tell TIR	10
TABLES	
Table	
1. Typical Manning's <i>n</i> values for ice covers	6
2. Typical ranges for ice properties and constants	7

ICETHK User's Manual Version 1

ANDREW M. TUTHILL, JAMES L. WUEBBEN, AND JOHN J. GAGNON

INTRODUCTION

ICETHK is an ice utility program that is used in conjunction with the HEC-2 backwater model (U.S. Army 1990) to simulate an equilibrium ice jam profile. ICETHK uses the results of hydraulic calculations from HEC-2 with an ice cover to produce new estimates of ice thickness and ice roughness for the reach of river being modeled. HEC-2 is then used to recalculate the hydraulic conditions with the updated ice values from the previous ICETHK run. The HEC-2/ICETHK iteration cycles continue until the change in ice thickness between successive iterations is acceptably small.

ICETHK, like HEC-2, models one-dimensional, steady-state flow. There is no provision for ice motion. Figure I depicts an equilibrium ice jam profile. The algorithms within ICETHK assume an "equilibrium reach" of ice jam, where the flow is uniform, ice thickness is constant, and downstream forces acting on the ice cover are resisted entirely by friction at the banks (Beltaos 1983). The user must specify the downstream and upstream locations of the jam, based on field observation of past jams, channel characteristics, or estimates of ice jam volume and length. The transition areas at the downstream and upstream ends (toe and head) of the jam may not be adequately described by equilibrium ice jam theory. ICETHK is a con-

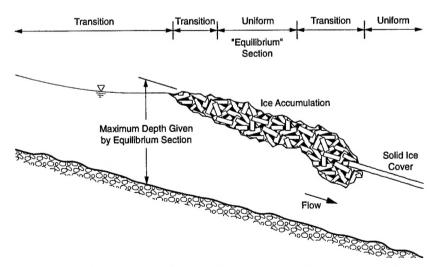


Figure 1. Schematic profile of an equilibrium ice jam. The theory underlying the ICETHK model applies to the "equilibrium" section of the jam where ice thickness and flow are relatively uniform.

servative predictor of stage, however, because the maximum stage for a static jam typically occurs in the equilibrium reach of the profile.

ICETHK is a useful engineering tool because many flood studies and hydraulic design projects require the calculation of ice-affected stages. Before the development of ICETHK, the calculation of ice-affected backwater profiles using HEC-2 was painstaking, requiring many iterations. The basic theory underlying ICETHK is well established. The model has two strong points. First, ICETHK is used in conjunction with HEC-2, the most commonly used backwater model in the United States. River geometry data in the HEC-2 format are widely available. Second, ICETHK is designed to help the user understand ice jam processes, and is relatively easy to use.

EQUILIBRIUM ICE JAM THEORY AND ICETHK

Definition of an equilibrium ice jam

Figure 1 depicts an equilibrium ice jam, showing a central equilibrium reach of uniform flow and constant ice thickness. The transition zones at the head and toe of the jam are characterized by nonuniform flow and variable ice thickness. ICETHK treats each reach between adjacent cross sections as individual equilibrium reaches. Because the ice is considered stationary, its momentum is not considered. Equilibrium ice jam theory assumes that the downstream forces on the ice cover are resisted by the accumulation's internal strength and bank shear. The downstream forces are the water drag on the ice accumulation's underside and the downslope component of the ice accumulation's weight. The ice accumulation's ability to transfer these downstream forces to the banks depends on its internal strength and thickness, and the model's governing equations determine the minimum ice thickness at which this force balance can occur.

Ice thickness calculation

ICETHK calculates ice thickness by three processes: juxtaposition, thickening by shoving, and thinning by erosion.

Juxtaposition, as the name implies, describes a cover formed of ice pieces pushed edge to edge, in conditions of relatively low slope and low water-current velocity. Field observations have shown that an ice cover of juxtaposed pieces will remain stable when the surface velocity is less than 2.3 ft/s and the channel Froude number is

less than about 0.08. A cover formed of juxtaposed pieces is typically not much thicker than the minimum dimension of the individual pieces.

The second process is termed "shoving thickening." Downstream acting forces become great enough to cause the accumulation to collapse or "shove" and thicken, until strong enough to resist failure and downstream motion.

In cases of high water-current velocity, ice thickness may actually be reduced by erosion. For this situation, the amount of thinning is calculated. ICETHK asks the user for the thickness of the pre-breakup ice cover (ITHICK). If the calculated thickness by juxtaposition or shoving is less than ITHICK, the final thickness defaults to ITHICK. A similar convention prevents the ice cover from thinning to a value less than the initial ice cover thickness.

Iuxtaposition

ICETHK uses two methods to calculate ice cover thickness by juxtaposition. The first method uses a stability criterion developed by Michel (1978):

$$F = \frac{V}{\sqrt{gH}} \le \sqrt{2\left(1 - \frac{\rho_i}{\rho}\right)(1 - e)\frac{h}{y}} \left(1\frac{h}{y}\right) \tag{1}$$

where F = Froude number of the river

V = average velocity upstream of leading edge at which underturning and submergence occur

h = thickness of ice accumulation's leading edge

H = upstream flow depth

g = acceleration due to gravity

y = depth of flow under the ice cover leading edge = $H-S_1h$

 S_i = Specific gravity of ice (assumed to be 0.916)

 ρ , ρ_i = densities of water and ice, respectively

e = porosity of accumulation.

Juxtaposition typically occurs in situations where ice accumulation thickness is small relative to under-ice depth. As an upper bound, ICETHK first checks to determine whether a juxtaposition solution is possible by assuming an ice accumulation thickness that is one-third the under-ice depth, i.e.,

$$\frac{h}{y} = \frac{1}{3}. (2)$$

If the upstream Froude number

$$\frac{V}{\sqrt{gH}}$$

is less than or equal to the right-hand side of eq 1, a solution by juxtaposition is assumed possible. The accumulation's leading edge thickness h, which satisfies eq 1, is then found by trial and error.

The second method, derived by Ashton (1974), is based on the particle Froude number F_p :

$$F_{\rm p} = \frac{V_{\rm c}}{\sqrt{gh\left(1 - \frac{\rho_{\rm i}}{\rho}\right)}} \le \frac{2\left(1 - \frac{h}{H}\right)}{\sqrt{5 - 3\left(1 - \frac{h}{H}\right)^2}} \,. \tag{3}$$

Again, ICETHK checks to determine whether a solution is possible, i.e., left-hand side less than or equal to right-hand side for h/y = 1/3, then solves for h, the leading edge thickness.

Shoving

Thickening due to shoving is calculated by eq 4. The underlying theory was developed through the work of many, including Kennedy (1958), Pariset and Hausser (1961), Michel (1965), Pariset et al. (1966), Uzuner and Kennedy (1976), and Beltaos (1978).

As stated earlier, the equations describing thickness by shoving apply only to the equilibrium reach of the jam (see Fig. 1). Assumptions include uniform flow, constant ice thickness, and the transfer of all downstream forces on the ice accumulation to the banks. It should be restated that difficulties arise when using ICETHK to model the head and toe of the jam, where conditions of varied flow and changing ice thickness exist.

Under steady-state conditions, the uniform section of an ice accumulation, compressed by shoving, can be described as

$$\mu \left(1 - \frac{\rho_i}{\rho}\right) gh^2 - \left(g\rho_i SB - 2C_i\right)h - \tau B = 0$$
 (4)

where h = thickness of the ice accumulation

 μ = coefficient related to the internal strength of the accumulation, ranging from 0.8 to 1.3

 ρ , ρ_i = densities of ice and water

g = acceleration due to gravity

S = energy slope

B =channel width at bottom of ice cover

C_i = cohesion factor for ice (can range from zero for breakup jams to 20 lb/ft² for freezeup jams)

 τ = shear force on underside of accumulation, approximated by $\rho g(y_i/2)S$, where y_i = under-ice depth.

Ice thinning

The water velocity beneath an ice cover may be high enough to erode ice pieces and thin the accumulation in a manner analogous to sediment transport. The user inputs a threshold velocity (VEROS), above which erosion or thinning of the ice cover takes place. The "thinned" ice cover thickness is estimated by the following form of the continuity equation:

$$h_{\mathsf{t}} = \frac{1}{S_{\mathsf{i}}} \left[H - \left(\frac{V}{V_{\mathsf{c}}} \right) (H - S_{\mathsf{i}} h) \right] \tag{5}$$

where h_t = thickness of "thinned" ice cover

H = open water depth

V = average water-current velocity

 V_c = maximum non-eroding velocity (input by user) (VEROS)

h = ice thickness before thinning

 S_i = specific gravity of ice, assumed to be 0.916.

Typical values for VEROS range from 3 to 5 ft/s for freezeup-type jams and 4 to 8 ft/s for break-up. If the HEC-2 calculated water-current velocity is greater than VEROS, eq 5 will reduce the ice thickness, but not to a value less than the thickness of the initial (pre-jam) ice cover (ITHICK).

Roughness of the ice accumulation

Of the four roughness options available in ICETHK, two involve direct assignment of Manning's *n* values and two involve calculation of roughness. Ice roughness can be calculated as a function of ice thickness or as a function of ice piece size.

Existing field data show that thick jams are typically made up of larger ice pieces and are hydraulically rougher than thin jams. Relationships in the ICETHK model, based on Nezhikovskiy's (1964) data, relate Manning's n values for the ice cover to the ice accumulation thickness. The relationships take the form of a similar equation by Beltaos (1983). Nezhikovskiy's data were measured in wide canals 6.6 to 9.8 ft deep for ice floes, dense slush, and loose slush. For breakup situations with ice accumulations greater than 1.5 ft thick,

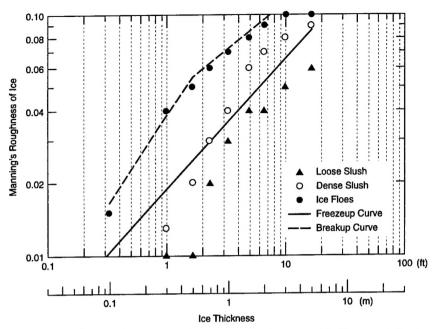


Figure 2. Nezhikovskiy's data plotted in log-log format with the ice-thickness-to-ice-roughness relationships used in the ICETHK model.

$$n_{\rm i} = 0.0588 \left(\frac{H}{2}\right)^{-0.23} t_{\rm i}^{0.40}$$
$$= 0.0690 H^{-0.23} t_{\rm i}^{0.40} \tag{6}$$

where H = total water depth $t_i = \text{measured thickness of the ice accumulation}$

A second breakup relationship applies to ice accumulations less than 1.5 ft thick:

$$n_{\rm i} = 0.0506 \left(\frac{H}{2}\right)^{-0.23} t_{\rm i}^{0.77}$$
$$= 0.0593 H^{-0.23} t_{\rm i}^{0.77}. \tag{7}$$

A third relationship predicts the roughness of a freezeup ice jam:

$$n_{\rm i} = 0.0249 \left(\frac{H}{2}\right)^{-0.23} t_{\rm i}^{0.54}$$
$$= 0.0292 H^{-0.23} t_{\rm i}^{0.54}. \tag{8}$$

Nezhikovskiy's data and the curves produced by these three equations are plotted in Figure 2.

Ice in overbank areas

Once flow depth in the floodplain reaches a threshold value, ice thickness in the overbank areas is determined by the same steps and equations as the channel ice thickness. The threshold floodplain depth is defined by the multiplier XTo times the pre-breakup ice thickness ITHICK. Using the same calculation method to calculate ice thickness in the overbank as is used for the main channel area relies on the assumption that the ice-on-ice shear between the channel and floodplain ice is approximately equivalent to the bank shear of a jam remaining in the channel.

STRUCTURE AND OPERATION OF ICETHK

ICETHK is designed as a utility program for HEC-2. Figure 3 shows the program's overall structure and the interaction between ICETHK and HEC-2. Boxes within the shaded line signify ICETHK subprograms while boxes with rounded corners indicate external input and output files. Overall the structure is fairly simple: ICETHK's READT95 subprogram reads hydraulic data from a HEC-2 T95 (output) file. The important work takes place in the ICETHN, SHOVE, JUXT, JAMSEL, and RUFCALC subprograms. Here the

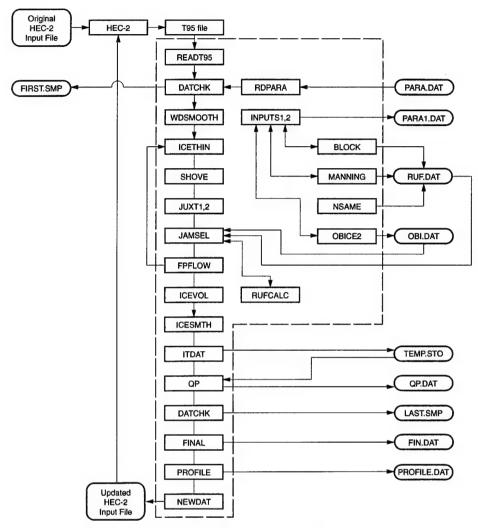


Figure 3. Structure of the ICETHK model. Square-cornered boxes indicate programs and subprograms. ICETHK subprograms lie within the large dashed-line box. External files (both input and output) are indicated by round-cornered boxes.

thickness and roughness of the equilibrium ice accumulation are calculated.

If water-current velocity is greater than the threshold velocity for thinning (VEROS), ICETHIN calculates thinning of the ice accumulation, as previously described. After checking if juxtaposition is possible, thickening due to juxtaposition is found in the JUXT1 and JUXT2 subprograms. The SHOVE subprogram then calculates the shoving thickness of the accumulation and the subprogram JAMSEL selects the greater of the shoving and juxtaposition thicknesses. ICETHK uses the thickness of the initial (parent) ice cover as a minimum. This means that the cover cannot thin beyond the parent ice thickness. It also means that, if a solution is not possible by juxtaposition or shoving, the parent ice thickness will be used.

The subprogram RUFCALC calculates the ice roughness as a function of accumulation thickness. If floodplain flow depth is greater than a user-defined threshold value, the process described in the previous paragraph is repeated to calculate ice thickness in the overbank areas.

Finally, the subprogram NEWDAT inserts the resulting ice data into the appropriate IC lines of the original HEC-2 input file, creating a new input file.

ICETHK contains the additional subprograms DATCHK, WDSMOOTH, ICEVOL, ICESMTH, ITDAT, QP, FINAL, and PROFILE. ICETHK also creates and uses a number of external files for data output and for data storage between iteration cycles. The purpose of these additional subprograms and the external files will become clearer

in the following sections on inputs and outputs to ICETHK.

The HEC-2 ICETHK cycle repeats itself a user-specified number of times. Several programs, external to the main ICETHK program, such as START.EXE and BIGBAT.EXE, accomplish the multiple HEC-2 ICETHK iteration cycles by writing and executing DOS batch files such as MAKE.BAT and WRITE.BAT. These batch files in turn run HEC-2 and ICETHK the desired number of times.

Inputs

ICETHK has many input options. Ice parameters may be input through a conventional input file, PARA.DAT, or through an interactive screenprompted session, driven by the INPUTS 1 and 2 subprograms. The example PARA.DAT input file in Appendix A contains typical parameters for a breakup ice jam. Input options include selection of ice parameters such as the ice pack porosity, the internal strength of the ice accumulation, and the cohesion. A number of methods are available for calculating ice roughness, and the user may also choose among methods of calculating ice thickness in the overbank areas. These and other input parameters are described below. The actual mechanics of loading and running the program are covered later in this report.

Channel width smoothing

While natural channels can have significant variations in width, the moving ice is often confined between shore-fast shear walls during an ice run. The top width between these shear walls tends to be much more uniform than the open water width. It is the width between the shear walls that governs the thickening process during shoving events. The WDSMOOTH option can be used to account for the formation of shear walls where the variation in top width between adjacent cross sections is large. At a given cross section, the width at the bottom of the ice cover (bottom width) is reduced to the lesser of the bottom widths at the upstream and downstream cross sections. A further constraint limits the width variation between adjacent cross sections to 10 percent.

Thickness and roughness of the initial ice cover

ICETHK requires estimates of the thickness and roughness of the parent ice cover or ice floes, ITHICK and NOLD. These values are used to represent the ice cover in river reaches where it is determined that the ice does not thicken beyond

a single layer. A range of probable Manning's *n* values is given in Table 1.

Table 1. Typical Manning's n values for ice covers.

Type of ice cover	Description	Manning's n range
Sheet ice	smooth underside rippled underside fragmented	0.008-0.012 0.01-0.03 0.015-0.025
Frazil ice	new—1 to 3 ft thick 3 to 5 ft thick aged—	0.01-0.03 0.03-0.06 0.01-0.02

Presence of ice in overbank areas

Ice can be expected to enter the floodplain areas if the depth is slightly greater than the ice thickness. The user enters a multiplier (XTo) controlling the presence of ice in the overbank area. Once the floodplain flow depth exceeds XTo times the parent ice thickness, overbank ice thickness calculations will be made by ICETHK. If XTo times the parent ice thickness is less than the floodplain flow depth at a particular cross section it is assumed that the floodplain area is free of ice at that location. XTo should be at least 1.0 while the 1.5 to 2.0 range is probably more reasonable. Trees lining the banks, or natural levees, may keep ice in the channel, requiring much higher values of XTo. For cross sections with floodplain flow above the threshold depth, ICETHK provides five options:

- 1. No ice in overbank areas.
- 2. User-defined overbank ice thickness.
- 3. Overbank ice thickness equals channel ice thickness.
- Overbank ice thickness determined by ICETHK.
- Retain overbank ice thicknesses (ZITL and ZITR) from the SUMPO file of the previous HEC-2 run.

If option 2 is chosen (user-defined overbank ice thickness), the external file OBI.DAT must be created to store overbank ice thicknesses. (Appendix B contains a sample OBI.DAT file.) It is easiest to use the interactive inputs method, in which case OBI.DAT will be created automatically.

Properties of the ice accumulation and constants

Table 2 gives default values and typical ranges for additional ice properties. Constants used by the ICETHK program are also listed.

Table 2. Typical ranges for ice properties and constants.

Property	Symbol	Default value	Typical ranges
Internal strength coefficient	μ	1.2	0.8–1.3 (Beltaos 1983) Lower μ gives thicker jams.
Porosity of ice accumulation	e	0.5	0.4–0.5 at breakup 0.5–0.7 for slush pans during freezeup
Cohesion factor for ice pieces	C_{i}	0 lb/ft ²	0 for breakup jams 0–25 lb/ft² for freeze- up accumulations
Maximum non-eroding water velocity: Hydraulic limit on jam thickness.	VEROS	4.0 ft/s	3–5 ft/s for freezeup 4–8 ft/s for breakup
Specific gravity of ice	$S_{\mathbf{i}}$	0.916	
Density of water	ρ	1.94 slugs/ft	3
Acceleration due to gravity	8	32.2 ft/s ²	

Maximum thickness increase per HEC-2/ICETHK iteration cycle

In certain instances, limiting the allowable thickness increase in a single HEC-2/ICETHK iteration cycle will improve the stability of the solution or reduce the number of iterations necessary to arrive at a stable solution. This is accomplished by adjusting the input variable Del *T*. The default value for Del *T* is 1.0 ft.

Ice smoothing option

The smoothing option employs a three-point moving average to smooth ice thickness, if the thickness difference between adjacent sections exceeds a threshold value (ISDEL). Abrupt changes in thickness are unlikely to occur in the natural ice jam case. Ice is likely to be eroded from thicker parts of the accumulation to be redeposited at downstream locations where the jam is thinner. The smoothing option attempts to model this process.

Ice accumulation roughness options

The user can choose between the following four ice roughness input options:

- 1. Let ICETHK calculate *n* of ice (NICE), no user input.
- Let ICETHK calculate NICE, user estimates fragment size.
- 3. User estimates NICE directly.
- 4. Retain NICE values from SUMPO file of previous HEC-2 run.

Option 3 will require the preparation of the external ice roughness input file, RUF.DAT. Using the interactive inputs method, this file is created automatically. An example of RUF.DAT is included in Appendix C.

Roughness multiplier

A roughness multiplier (RMULT) is used to calibrate ICETHK to observed field data. If RMULT is non-zero and positive, all ICETHK calculated roughnesses are multiplied by a single RMULT. In some cases, however, calibration to field-observed water levels requires different multipliers at different cross-section locations. In this case a zero (0) value is entered for RMULT and the file RUFMULT.DAT must be prepared by the user. Appendix D gives an example RUFMULT.DAT file.

Ice jam type

The user must indicate whether the jam is a freezeup or breakup type. This information determines which equation (6, 7, or 8) is used. ICETHK calculates roughness.

Depth factor

The depth factor (DFACT) limits the maximum possible thickness due to shoving to DFACT times water depth. The depth option can be used to prevent the modeled ice accumulation from approaching a grounded condition.

Outputs

ICETHK includes a number of output options. The most important product is the updated HEC-2 input file containing ice thicknesses and roughnesses calculated by the previous ICETHK run. The ICETHK summary output file FIN.DAT also lists important ice parameters, as well as cautionary notes on the stability of the ice accumulation. Ice and hydraulic data from the first and last iterations are written to the files FIRST.SMP and LAST.SMP. The comma-delimited files QP.DAT and PROFILE.DAT are designed to export data to spreadsheets for plotting. QP.DAT contains data from successive iterations and is used to check solution stability. An ice jam profile can be easily plotted by importing the file PROFILE.DAT into a spreadsheet. Additional external files used to store data from one iteration to the next include TEMP.STO, RUF.DAT, and OBI.DAT. The following section describes ICETHK's output options in detail.

Updated HEC-2 input file created by ICETHK

The original HEC-2 deck (App. E) contains only one IC card following the first QT line. The IC card is the record in the HEC-2 input file that provides ice thickness and roughness data (U.S. Army 1990). This single IC record signifies a singlelayer sheet ice cover of constant thickness and roughness over the entire river. Appendix F shows the first page of a HEC-2 input file, created after five HEC-2/ICETHK iteration cycles. Note that two IC lines appear before each X1 card, providing ice data for each cross section. On the updated deck an NC card has been inserted above each pair of IC lines for any cross sections where an NC record did not exist in the original HEC-2 deck. NC records provide HEC-2 with information on channel bed roughness. This channel bed roughness information is used by ICETHK to calculate overbank ice thickness. Each HEC-2/ICETHK iteration creates a new HEC-2 input file that serves to transfer the updated ice data to the next HEC-2 run (see Fig. 3). For example, if the original file is WINDN.DAT (App. E) and there are five iterations, the files WINDN1, WINDN2, WINDN3, WINDN4, and WINDN5 will be created. To conserve space in memory, it's a good idea to periodically delete intermediate files that are not being used. ICETHK is capable of up to nine iterations at a time. If a stable solution is not reached after nine iterations, it is unlikely that additional iterations will improve convergence.

ICETHK's summary output file: FIN.DAT

The ice data from the final ICETHK run are listed in ICETHK's summary output file, FIN.DAT (App. G). The user can assess the stability of the solution by comparing final ice thickness to the thickness found in the previous iteration. Overbank ice thickness, channel ice roughness, velocity of water flow, and cumulative ice volume are listed. The TMODE column lists the mode of thickening for each reach. The THIN message indicates that current velocity is high enough to erode the underside of the ice accumulation. The SHOVE and JUXT messages tell that the calculated ice thickness is the result of shoving or juxtaposition, respectively. The notes included in FIN.DAT are important because they point out some of ICETHK's limitations. They are listed and explained below:

- Ice thickness = 0 due to VCH > VEROS (= 5 ft/s) with no ice. This comment tells that the average channel velocity (VCH) is greater than the maximum non-eroding velocity (VEROS) and that the ice cover has entirely eroded away.
- Ice thickening mode is SHOVING and VCH
 VEROS: Ice pack unstable. Thickness
 required for stability is greater than that
 listed. This condition may occur in high dis charge and/or high channel slope situa tions. In the actual river, this condition may
 correspond to an ice-free reach.
- 3. Water entering floodplain, channel ice thickness nearing maximum. Channel ice not stable. As the water level increases above the floodplain elevation, the area of ice in contact with the channel banks decreases or disappears. With the resisting force decreased or eliminated, the ice accumulation is increasingly likely to move downstream.
- 4. Floodplain depth > XTo (1.5) × initial ice thickness or floe thickness. Ice in floodplain? This alerts the user that overbank flow is occurring and that ice in the floodplain is possible. FIN.DAT includes the summary of run conditions and initial values found at the end of Appendix G.

Summary output files: FIRST.SMP, LAST.SMP

The ICETHK subprogram DATCHK produces the summary output files FIRST.SMP and LAST.SMP during the first and last iterations

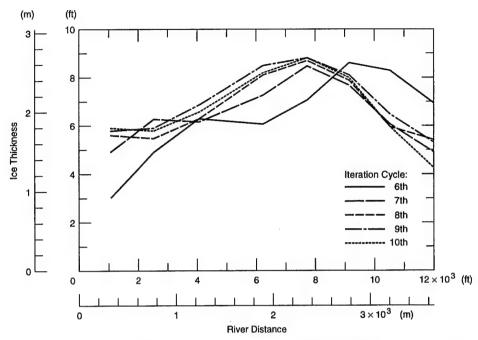


Figure 4. Ice thickness convergence of successive HEC-2/ICETHK iteration cycles.

(App. H and I). The HEC-2 variable names used include

SECNO	cross-section number
CWSEL	channel water surface elevation
VCH av	verage channel water-current velocity
DEPTH	channel depth
10K*S	channel water surface slope * 10,000
XLCH	channel reach length
CHBW	channel (ice) bottom width
XLBEL	elevation of left bank station
CNICE	channel ice roughness
ZITCH	channel ice thickness
THIN	ice thickness if thinning takes place
ZITL	left overbank ice thickness
ZITR	right overbank ice thickness
LNICE	left overbank ice roughness
RNICE	right overbank ice roughness.

These and other data may also be viewed using the SUMPO option within HEC-2.

Output files for use with spreadsheets: QP.DAT and PROFILE.DAT

The file QP.DAT contains depth (DPTH), channel velocity (VCH), channel water surface elevation (CWSL), slope (CSLP), and channel ice thickness (ZTCH) from successive iterations. QP.DAT is designed for export to a spreadsheet taking the form shown in Appendix J. Thickness profiles for

various iterations can then be made (Fig. 4), showing the stability of the solution.

By a similar process, ice-jam profiles may be quickly produced from the file PROFILE.DAT (App. K). The current version of PLOT2, within HEC-2, is not capable of plotting ice profiles at this time. As an alternate method, HEC-2 SUMPO files resulting from the final HEC-2/ICETHK iteration can be imported to a spreadsheet, and ice profiles made. Figure 5 is an example.

The output files FIN.DAT, FIRST.SMP, LAST.SMP, QP.DAT, and PROFILE.DAT are produced each time the ICETHK program runs. To save any or all of these files, they must be copied to a new name before the next ICETHK run.

USING ICETHK

This section describes the actual mechanics of using the ICETHK program. Also included are instructions on loading the program on a PC equipped with DOS.

Loading ICETHK

A diskette is available that contains the 26 files listed in Appendix L. (To obtain this diskette, please write to U.S. Army CRREL, ATTN: CECRLIE, 72 Lyme Road, Hanover, NH 03755-1290.) FICETHK.EXE contains the main program. The

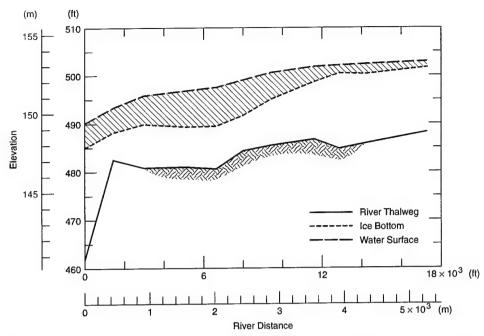


Figure 5. Ice-jam profile produced by importing ICETHK output file, PROFILE.DAT, into a spreadsheet.

other executable and batch files drive the HEC-2/ICETHK iteration process. Also included are external files for storage of data between iterations, as well as sample input and output files. The HEC-2 executable HEC2.EXE is provided in case your version of HEC-2 does not have the bottomwidth option. ICETHK uses the bottom-of-ice width variables rather than river-top width in ice thickness calculations.

Because many files are created in the execution of ICETHK, it is a good idea to create a separate directory for the program. This directory must be accessible to HEC-2. Copy the contents of the ICETHK diskette into this directory. Again, if your version of HEC-2 has bottom-width variables, you will not need to copy HEC2.EXE.

Running ICETHK

Once the program and data files are installed, start execution by typing MAIN, at the DOS prompt, within the ICETHK directory. You will be asked for the number of HEC-2-ICETHK iterations (1 to 9 is the possible range). Next you will be asked for the name of the original HEC-2 data file. WINDN.DAT, TOSTON.DAT, and FWJ4700.DAT are provided as samples. Each input deck initially contains one IC line after the first QT card. Type in the data file name with the DAT extension. HEC-2 should run once, then you will be asked if you want an interactive inputs ses-

sion or if you want ICETHK to take ice parameters directly from the PARA.DAT input file.

HEC-2 and ICETHK should then cycle the desired number of times. Forms of output are described in the previous section of this report. The ICETHK summary output file FIN.DAT lists ice thicknesses for the final and second-to-last iterations, as well as notes on the stability of the ice accumulation for individual reaches.

RIVER ICE MODELING WITH ICETHK

ICETHK can be a useful tool in synthesizing stages associated with ice jam flooding. This section describes some important aspects of modeling river ice processes using ICETHK and HEC-2. Also described are some of the model's limitations.

Limitations

The ICETHK model, like HEC-2, is steady state and does not address ice motion or transport. The model cannot predict where an ice jam will form. ICETHK simply calculates the equilibrium thickness for a floating ice accumulation, reach-by-reach, for a given set of hydraulic conditions and ice parameters. Although ice runs and ice jams are often extremely dynamic processes, ICETHK does

not consider the effects of momentum transfer. Ice jams may be grounded, particularly at the downstream end, presenting modeling difficulty, because the theory behind ICETHK applies to floating jams. These limitations force the modeler to draw from other information sources, such as historical ice jam data and reports from field observers.

If the toe of the jam is grounded, ICETHK may underpredict thickness in this area. Similarly, ICETHK tends to overpredict ice thickness at the jam's upstream end, where the ice supply may be limited. ICETHK may underpredict ice thickness along bends, because no provision is made for the added friction along the outside of the bend. Finally, some uncertainty surrounds the model's ability to accurately reproduce ice thickness while matching field-measured stage, because field-measured ice-thickness data sets are rare.

Ice jam location

The user must decide on the location of the ice jam being modeled. Historical records, eyewitness accounts, and field observations are potential information sources on jam location. Lacking this kind of information, the user may have to infer likely ice jam locations from channel characteristics, such as zones of reduced bed slope or channel bends. Deposition of sediment often occurs in these slope change areas, thereby further increasing the ice jam potential. Once an observed or potential jam location is chosen, the HEC-2 input deck may be prepared, with its starting cross section at the toe of the jam to be modeled.

Calibration to observed ice conditions

Ideally some ice event field data will exist. Important items, in addition to ice jam location, are stage and discharge during the event period, as well as estimates of ice piece size and accumulation thickness.

Ice-affected stage

ICETHK can be calibrated to match observed or gaged water levels, or top of ice elevations, along the ice-jam reach. Water levels downstream and upstream of the jam are also important. Ideally, a recording stage gage will be located near or within the ice-jam reach. Because this is rarely the case, however, the modeler must often rely on photographs and the accounts of observers.

Discharge

Care must be taken in assigning a discharge

value to a particular ice jam event. Stage gages may be affected by ice, contributing to inaccuracy in the discharge estimate. For this reason, gages significantly upstream or downstream of the jammed reach may provide the best estimate of the average discharge during the event. A 15minute to hourly discharge record is useful for estimating the flows at the time of breakup, jam initiation, and jam release. A stable discharge while the jam is in place, sometime before the peak, is most appropriate for modeling equilibrium conditions, rather than the peak discharge itself. The peak may be associated with the release of the jam. The relationship between the discharge hydrograph and the timing of the ice event is discussed in a later section on the construction of iceaffected stage discharge curves. Ice thickness during a jam event is difficult to measure. A good estimate of accumulation thickness may be possible, however, by observing shear wall height along the channel sides, after the jam goes out.

Calibration parameters and variables

The effects of parameters and variables used to calibrate ICETHK to observed water levels are described below.

The parameter μ is the coefficient related to the internal friction of the accumulation and the ice shear along the banks. Lower μ means less internal strength and less bank shear, so the accumulation needs more thickness to withstand the downstream-acting forces.

The variable VEROS is the maximum noneroding velocity. Thickness is fairly sensitive to this variable, particularly in reaches of high current velocity.

The variable RMULT is the roughness multiplier. For all cross sections, roughnesses calculated by ICETHK are multiplied by RMULT, unless RMULT = 0. If RMULT = 0, then ICETHK refers to the external file RUFMULT.DAT for a list of roughness multipliers, one RMULT value for each cross section.

DFACT is the depth factor, which limits thickness due to shoving to a fraction of the total water depth. This option may be useful if the user wants to limit ice thickening at cross-section locations.

The parameter C_i determines the cohesion between ice pieces. This influences the internal strength and thus the thickness of a freezeup ice accumulation.

These calibration parameters are explained in greater detail in the section titled Inputs.

Ice jam volume and ice supply

As discussed in the section on limitations, ICETHK calculates the thickness of an equilibrium ice accumulation reach-by-reach and does not address ice motion or transport, assuming an unlimited ice supply. In a natural river system, the ice supplying a jam is finite, however. There may be an ice-jam site or dam upstream, which limits the ice supplying a jam downstream. Through field observation or a process of assumptions, the modeler may want to define the source reach supplying ice to the jam being modeled. For a breakup event, the volume of the pre-breakup (parent) ice cover may be calculated by multiplying the source reach area by a pre-breakup ice thickness. The pre-breakup ice volume may be found by running HEC-2 with a sheet ice cover of the desired thickness, at a typical midwinter base discharge. It is important to note that there may be losses. A significant portion of the parent ice volume (V_p) may melt during the run or be deposited as debris along the banks. With this in mind, the user can estimate the volume of ice in the jam being modeled (V_i) , accounting for the ice pack porosity:

$$V_{\rm j} = \frac{V_{\rm p} (1 - \% \text{ losses})}{1 - e}$$
 (9)

ICETHK's FIN.DAT output file (App. G) accumulates ice volume, starting at the toe of the jam

and working upstream. Once this cumulative ice volume exceeds the previously estimated parent ice volume, the user may want to zero out the ice cover at upstream sections. This is done by removing the IC lines from the appropriate cross sections of the final HEC-2/ICETHK run. A search-andreplace function, available with many text editors, is useful for this task. A final HEC-2 run then gives the combined profile of ice jam and open water reaches.

Construction of ice-affected rating curves

The ICETHK model may be used to construct ice-jam rating curves. The accuracy of this effort depends on many factors, some of which have already been mentioned. It is important to have a knowledge of the range of discharges at which an equilibrium jam will exist. The case of the 11 March 1992 ice jam at Montpelier, Vermont, is used here to illustrate.

The jam initiated at 0700 hr when the discharge hydrograph (Fig. 6) showed a flow in the 2000- to 3000-cfs range. The jam released at 1700 hr, at a discharge of roughly 8000 cfs. The ICETHK model was calibrated to observed water levels along the ice-jam reach using the daily average flow of 4700 cfs. After model calibration, ice-jam stages were found for discharges within the known ice-jam range, and an ice-jam rating curve was constructed (Fig. 7). The open water and sheet-ice rating curves were found using HEC-2

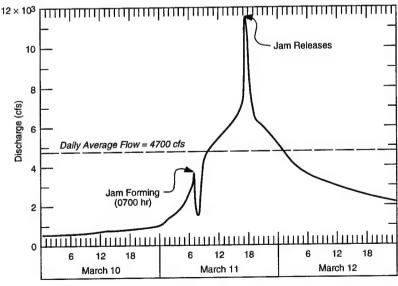


Figure 6. Discharge hydrograph for the Winooski River at Montpelier, Vermont, during the 11 March 1992 breakup ice jam.

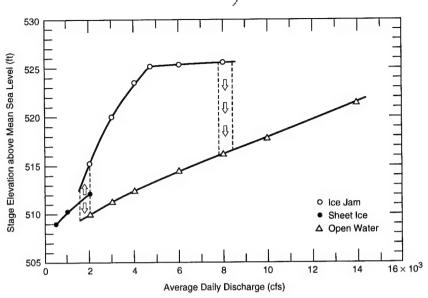


Figure 7. Ice-jam rating curve for the Winooski River at Montpelier, Vermont, calculated using HEC-2 and ICETHK. Stage follows the sheet-ice rating curve until the breakup discharge is reached. The ice-jam rating curve is then used to predict stage until the release discharge is reached and stage drops to the open water curve.

for open water and sheet-ice conditions. Note that the combined rating curve follows the sheet-ice curve until breakup at approximately 2000 cfs, then follows the ice-jam curve until release at about 8000 cfs. At flows in excess of the estimated breakup discharge, the open water rating curve is used.

LITERATURE CITED

Ashton, G.D. (1974) Froude criterion for ice block stability. *Journal of Glaciology*, **13**(68), p. 309–313. **Beltaos, S.** (1978) Field investigations of river ice jams. In *Proceedings of IAHR Symposium on Ice Problems, Lulea, Sweden, 7–9 August.* International Association for Hydraulic Research, Part 2, p. 355–371.

Beltaos, **S.** (1983) River ice jams: Theory, case studies, and applications. *Journal of Hydraulic Engineering*, **109**(10): 1338–1359.

Kennedy, R.J. (1958) Forces involved in pulpwood holding grounds. *Engineering Journal*, **41**: 58–68.

Michel, B. (1965) Static equilibrium of an ice jam at breakup (in French). Proceedings, 11th Congress of the International Association for Hydraulic Research, vol. 5, p. 37–48.

Michel, B. (1978) *Ice Mechanics*. Les Presses de l'Université Laval, Quebec.

Nezhikhovskiy, R.A. (1964) Coefficient of roughness of bottom surfaces of slush ice cover. *Soviet Hydrology*, *Selected Papers*, No. 2, p. 127–150.

Pariset, E., and R. Hausser (1961) Formation and evolution of ice covers on rivers. *Transactions, Engineering Institute of Canada*, **5**(1): 41–49.

Pariset, E., R. Hausser, and A. Gagnon (1966) Formation of ice covers and ice jams in rivers. *Journal of the Hydraulics Division, American Society of Civil Engineers*, **92**(HY6): 1–24.

U.S. Army (1990) HEC-2 Water Surface Profiles. Hydrologic Engineering Center, U.S. Army Corps of Engineers, Davis, California.

Uzuner, M.S., and J.F. Kennedy (1976) Theoretical model of river ice jams. *Journal of the Hydraulics Division, American Society of Civil Engineers*, **102**(HY9): 1365–1383.

APPENDIX A. CONVENTIONAL INPUT FILE TO ICETHK: PARA.DAT

INPUT PARAMETERS FOR ICETHK-FORTRAN

Interactive inputs session ? (1. = yes, 2.	= no)	2.	RAM(1)
Unused parameter			
Width-smoothing option ? (1. = yes, 2. = r	10)	1.	RAM(2)
Initial ice conditions (for all cross sect	ions)	2.	RAM(3)
Initial ice thickness (ft)	(ITHICK)	1.50	RAM(4)
Initial ice roughness (Manning's n)	(NOLD)	0.025	RAM(5)
Unused parameter		1.	RAM(6)
Water depth above floodplain at which ice			
goes overbank (No. of ice thicknesses)	(XTo)	1.5	RAM(7)
Coefficient related to internal			
friction of ice accumulation	(μ)	1.2	RAM(8)
Ice pack porosity	(e)	0.5	RAM(9)
Cohesion factor for ice (0 @ breakup)	(C _i)	0.	RAM(10)
Maximum non-eroding velocity (ft/s)	(VCRIT)	5.0	RAM(11)
Specific gravity of ice	(S_i)	0.916	RAM(12)
Maximum ice thickness increase allowed in a single iteration (ft)	(DEL T)	3.	RAM(13)
Unused parameter		2.	RAM (14)
Ice roughness (Select one of the 4 alterna (NFLG)	tives):	1.	RAM(15)
 ICETHK calculates n (no user input) ICETHK calculates n (user estimates User estimates Manning's n directly Retain n values from the previous H 	size).		
Overbank ice (Select one of the 5 alternat	ives):	4.	RAM(16)
 No ice in overbanks. User-defined overbank ice thickness Overbank ice thickness = channel ic Overbank ice determined by ICETHK. Retain thickness from previous HEC- 	e thickness		
Unused parameter		1.0	RAM(17)
Roughness multiplier		1.00	RAM(18)
If zero, differential roughness multip	liers		
Density of water (slugs/ft3)	(ρ)	1.94	RAM(19)
Acceleration due to gravity (ft/s2)	(g)	32.2	RAM(20)
Freezeup or breakup jam? 1 = freezeup	(JTYPE)		
2 = breakup		2.0	RAM(21)
Employ ice-smoothing option? 1 = yes, 2 =	no	1.	RAM(22)
Ice redistribution threshold (ISDEL). If c	-	3.	RAM(23)
<pre>in thickness between two adjacent sect > ISDEL, then ice thickness will be sm</pre>			
Depth factor (DFACT). Limits maximum shovi	ng	0.8	RAM(24)
thickness to DFACT * DEPTH.			

APPENDIX B. SAMPLE OF THE FILE OBI.DAT CONTAINING USER INPUT ICE THICKNESS IN THE OVERBANK AREAS

ICETHK reads only the right-hand column. (FORTRAN format: 10X,F10.1)

1.062	1.0
2.537	1.0
4.057	1.0
6.207	1.0
7.727	1.0
9.127	1.0
10.502	1.0
12.672	1.0
13.937	1.0
15.327	1.0
18.357	1.0
19.157	1.0
20.082	1.0
20.232	1.0
20.257	1.0
20.382	1.0
21.342	1.0
22.342	1.0
24.102	1.0
25.642	1.0
10.000	1.0
240.000	1.0
1060.000	1.0
1080.000	1.0
1370.000	1.0
2010.000	1.0
3300.000	1.0

APPENDIX C. SAMPLE OF THE FILE RUF.DAT CONTAINING USER INPUT ICE ROUGHNESS DATA

ICETHK reads the data in the second column only. (FORTRAN format: 10X,F10.3)

8421.000	.055	
8689.000	.061	
8761.000	.063	
8821.000	.068	
9101.000	.079	
9459.000	.075	
9610.000	.079	
9640.000	.082	
9791.000	.084	
9927.000	.078	
10185.000	.075	
10255.000	.076	
10295.000	.077	
10451.000	.151	
10792.000	.150	
10883.000	.119	
11004.000	.112	
11070.000	.108	
11090.000	.098	
11140.000	.089	
11190.000	.076	
11260.000	.066	
11390.000	.073	
11540.000	.083	
11789.000	.079	
12189.000	.076	
12619.000	.000	
12919.000	.000	
13419.000	.000	
13965.000	.000	

APPENDIX D. SAMPLE OF THE FILE RUFMULT. DAT, USED TO CALIBRATE THE ICETHK MODEL

The value in the right-hand column is multiplied by the computed ice roughness. For this option to be used, the variable RMULT, entered in the PARA.DAT, must be zero. (FORTRAN format: 15X,F10.2)

123.75	1.30
123.76	1.20
123.76	1.10
123.78	1.00
123.78	1.00
123.79	1.00
124.08	1.00
124.38	1.00
124.70	1.00
125.41	1.00
126.00	1.00
127.00	1.00
127.60	1.00
128.00	1.00
128.57	1.00
129.03	1.00
129.36	1.00
129.38	1.00
129.88	1.00
130.29	1.00
130.64	1.20
130.70	1.30
131.00	1.40
131.15	1.30
131.16	1.20
131.18	1.10
131.19	1.00
131.23	1.00
131.36	0.90
131.37	0.80
131.39	0.80
131.40	0.80
131.49	0.80
131.94	0.80
132.20	0.80

APPENDIX E. SAMPLE OF THE ORIGINAL HEC-2 INPUT FILE, WINDN.DAT

The single "IC" line near the top of the file indicates a pre-breakup sheet-ice cover of constant thickness and roughness.

т1					SEX TO MO					
Т2					MODIFIED			DIS & KI	NG, INC.	
Т3					ICK SHEET					
J1	0	2			0	0	0			0
J2	1	0			0			0	0	0
NC	0.1	0.07	0.03	0.1	0.3	Ü	0	0	0	0
QT IC	1	3000	1.5	.02						
IC	Ctari	ting are			62 f t U/S	of Middl	locov Dar	n		
v 1	1.062	24	152	309		0			0	0
	542.6	0	C10 C	4.0		93			507.3	
	505.5	145	497 463.6	152	488.1			169	462.3	179
	461.4	189	463.6	199	469.1			219	483.7	
	488.1	239	490.1	309	515.3		520.3		524.1	399
	527.9	449	531.2		531.3					
NC	.070	.060			.200			0	0	0
X1	2.537	40	580	919	1450.0	1350.0	1475.0	0	0	0
GR	542.1	0	528.1		515.5		514.6	90	515.2	110
GR	516.1	125			519.8	260	519.8	300	506	390
GR	497.5	520	493	580	488	605	485.4	612	484	622
GR	483.1	632	482.7		482.4	672	482.6	682	483.1	692
	484.4	702	485		486.1	762	486.6	772	486.3	782
	486.3	812	485.7		484.6	852	483 523.1	882	488.1	900
	496.4	919		925	497				524.4	
	526.2	1015			523.7		525.2		552.5	
NC	.060	.070	.040		.200	0		0	0	0
					0 ft D/S					
	4.057	40	585	760	1470.0	1320.0	1520.0	0	0	0
X2	0	0	F40 3	4.5	F10.4	65	500 A	110	499	255
GR	548	440		45	486.5	65		110 600	484.5	355 620
	490.6 483.6	640	488 483.6	585 670	482.9	680	485.5 483.4	710	482.3	720
	480.6	730	487.7		486.2	750	495.3	760	502.9	780
	510.2	813	512.2		515.7		512.5	1000	510.9	1060
	511.6	1085	516		517.7			1121	516	1125
	503.8	1145	511.1	1175	505.5	1200	521.9	1240	516 523.6	1275
	519.7	1295	525.9		526.4			1367	536	
	.070	.070	.040		.300	0	0	0	0	0
X1	6.207	38.0	578.0	813.0	1500.0	2100.0	2150.0	0	0	0
GR	530.0	0	514.0	14.0	502 6	54 0	493 9	56.0	494.6	80.0
GR	489.4	93.0	492.9	118.0	492.3	303.0	493.5	468.0	496.4	578.0
GR	487.3	593.0	485.5		484.8		484.2		484.1	723.0
GR	480.8	783.0	483.4	793.0	486.0	803.0	497.9	813.0	500.7	893.0
GR	498.2	1003.0	504.5	1053.0	506.9	1163.0	510.7	1273.0	508.6	1488.0
		1578.0	510.0	1603.0	514.4	1608.0		1618.0		1633.0
GR	510.1	1653.0		1676.0	521.0	1711.0	521.5	1733.0	524.1	1750.0
GR		1793.0		1813.0	553.0	1876.0				
NC	.060	.060	.040	.100	.200	0	0	0	0	0
	7.727	35	1470	1685	1470.0	1350.0	1520.0	0	0	0
	535.5	0	521.2	30	510.2	110	503	150	502.7	175
	492.1	205	495.9	550	493.8	730	495.1	815	495.9	945
	498.5	1405	493.8	1455	497.7	1470	488.9	1490	486.5	1501
	487.5	1520	487.1	1560	485.6	1570	485	1590	483.7	1610
	481.4	1620	480.3	1640	484.6	1670	488.5	1680	497.8	1685
	509.1	1690	510.1	1810	512.3	1820	512.5	1840	515.2	1860
GR	512.2	1890	523.2	1925	523.2	1975	527.5	2005	535	2060

APPENDIX F. SAMPLE HEC-2 INPUT FILE CREATED BY THE ICETHK PROGRAM, WINDN5.DAT

Note that each cross section has two "IC" lines containing ice thickness and roughness values from the previous ICETHK run.

т1	WINOOS	KI RIVER-1	POND @ M	IDDLESEX	TO MONT	PELIER COF	P BNDRY			
Т2	PREPAR	ED FEB 199	93. BY C	RREL: MOI	DIFIED D	EC 1993 BY	DUBOIS	& KING,	INC.	
Т3	TNPUT	FILE CREAT	CED AFTE	R 5 HEC-2	2/ICETHK	ITERATION	CYCLES			
J1	0	2	0	0	0	0	0	0	490	0
J2	1	0	-1	0	0	0	0	0	0	0
QT	1	3000	_	-	-	-				
V.			section	is 1062	ft U/S	of Middles	sex Dam.	,		
NC	.100	.070	0.03	0.1	0.3	0	0		0	0
IC	.100		0.00	0.1	.01					
IC	.0	. 0	3.0	.049	.916					
x1	1.062		152	309	0	0	0	0	0	0
GR	542.6	0	519.5	49	516.4	93	508.5	100	507.3	129
	505.5	145	497	152	488.1	167	478.6	169	462.3	
-		189	463.6		469.1	209	470.4	219	483.7	
	461.4	239	490.1	309	515.3	341	520.3	391	524.1	399
	488.1		531.2	509		569	531.6	619	321.1	
GR	527 .9	449	531.2	509	331.3	202	331.0	015		
NC	.070	.060	.040	.100	.200	0	0	0	0	0
IC	.070	.000	.010	.100	.01					
IC	.0	.0	3.1	.065	.916					
	2.537	40	580		1450.0	1350.0	1475.0	0	. 0	0
GR	542.1	0	528.1		515.5	60	514.6	90	515.2	110
	516.1	125	519.2		519.8	260	519.8	300	506	390
	497.5	520	493		488	605	485.4	612	484	622
	483.1	632	482.7		482.4	672	482.6	682	483.1	692
	484.4	702	485		486.1	762	486.6	772	486.3	782
	486.3				484.6	852	483	882	488.1	900
	496.4	919	496.6	925	497	947	523.1	997	524.4	
	526.2	1015	526.2	1023	523.7	1027	525.2		552.5	1082
GIV						of Section				
NC	.076		.040		.200	0	0	0	0	0
IC	.0.0	0			.01					
IC	2.1	.0	2.8	.058	.916					
	4.057	40	585		1470.0	1320.0	1520.0	0	0	0
X2	0			, , , ,						
GR	548	0	519.3	45	510.4	65	500.4	110	499	355
	490.6		488		486.5	590	485.5	600	484.5	620
	483.6	640	483.6	670	482.9	680	483.4	710	482.3	720
	480.6	730	487.7	740	486.2	750	495.3	760	502.9	780
	510.2	813	512.2	835	515.7	910	512.5	1000	510.9	1060
	511.6		516		517.7	1115	516.6	1121	510.9 516 523.6 536	1125
	503.8	1145	511.1		505.5	1200	521.9	1240	523.6	1275
	519.7		525.9		526.4	1360	525.2	1367	536	1400
NC	.070	.070	.040	.200	.300	0	0	0	0	0
IC					.01					
IC	.0	.0	2.2	.051	.916					
X1	6.207	38.0	578.0	813.0	1500.0	2100.0		0	0	0
GR	530.0	0	514.0	14.0	502.6	54.0	493.9	56.0	494.6	
GR	489.4	93.0	492.9	118.0	492.3	303.0	493.5	468.0	496.4	
GR	487.3	593.0	485.5	603.0	484.8	623.0	484.2	683.0	484.1	
GR	480.8	783.0	483.4	793.0	486.0	803.0	497.9		500.7	
		1003.0	504.5	1053.0	506.9	1163.0		1273.0		1488.0
GR	510.0	1578.0	510.0	1603.0	514.4	1608.0		1618.0		1633.0
GR	510.1	1653.0	520.0		521.0	1711.0	521.5	1733.0	524.1	1750.0
GR	524.0	1793.0	522.0	1813.0	553.0	1876.0				

APPENDIX G. SAMPLE OF ICETHK SUMMARY OUTPUT FILE FIN.DAT

Input fi	PROGRAM ICETHK Summary Printout Input file: WINDN8.DAT Total Iterations = 9 SECNO Channel Ice Overbank Ice Manning Vch VollceCh TMODE SLOPE									
1	Previous	Final	Left	Right	n_{i}	(ft/s)	VolIceCh (Cu Yds)			
1.06 2.54	4.80	4.30	.00	.00	.057	4.68	0.0000E+00 6.7014E+04	SHOVE	.006698	
Notes 2 Notes 3 4.06 Notes 3	10.30	10.16	4.50	1.50	.086	2.19	2.0231E+05	SHOVE	.015242	
Notes 4 6.21 Notes 3	10.10	9.79	3.00	1.50	.084	1.17	4.7582E+05	SHOVE	.003306	
Notes 4 7.73 Notes 3	11.00	10.75	3.71	1.50	.086	1.06	7.8813E+05	SHOVE	.003417	
Notes 4 9.13 Notes 3	13.30	13.17	2.56	1.70	.097	1.53	1.1179E+06	SHOVE	.013411	
Notes 4 10.50 Notes 3	14.30	14.02	1.50	3.33	.099	1.19	1.4125E+06	SHOVE	.008538	
Notes 4 12.67 Notes 3	11.90	11.87	4.30	3.14	.091	3.24	1.7432E+06	SHOVE	.033313	
Notes 4 13.94 Notes 3	10.10	10.15	1.50	2.40	.083	1.98	1.8561E+06	SHOVE	.006317	
Notes 4 15.33 Notes 3	9.30	9.02	1.50	1.50	.079	2.22	1.9643E+06	SHOVE	.007030	
Notes 4 18.36 Notes 3	9.40	8.17	2.91	1.50	.076	1.84	2.2905E+06	SHOVE	.005577	
Notes 4 19.16 Notes 3 Notes 4	7.10	4.00	1.50	1.50	.060	1.16	2.3777E+06	SHOVE	.001357	
Notes 4										

Notes:

- 1. Ice thickness = 0 due to VCH > VEROS (= 5.0 ft/s) with no ice.
- 2. CAUTION: Ice thickening mode is SHOVING, and VCH > VEROS: Ice pack unstable! Thickness required for stability is greater than that listed.
- 3. Water entering floodplain channel ice thickness nearing maximum. Channel ice not stable.
- 4. Floodplain depth > 1.5 x initial ice thickness or floe thickness. Ice in floodplain?

Run Conditions: Width smoothing option was not employed.

Channel width option was employed. XTo = 1.5

Jam type: Breakup

Ice roughness (n_i) calculated by ICETHK.

Overbank ice thickness determined by ICETHK. Tdist = 1.0

Ice smoothing was employed.

Initial values: $T_{\rm io}$ = 1.5, $n_{\rm i}$ = .025, μ = 1.2, e = .50, $C_{\rm i}$ =.00 VEROS = 5.00, Del T = 3.0

APPENDIX H. SAMPLE OF ICETHK OUTPUT FILE FIRST.SMP

SUMPO file produced from WINDN5.DAT

RNICE	0000.	0000.	0000.	0000.	0000.	.0250	.0250	.0250	0000.	.0250	0000.	0000.
LNICE	0000.	0000.	0000.	0000.	0000.	.0250	.0250	.0250	.0250	.0250	.0000	0000.
ZITR	00.	00.	00.	00.	00.	.53	1.33	1.50	00.	1.50	00.	00.
ZITL	00.	00.	2.50	00.	00.	00.	1.50	1.50	.73	1.50	00.	00.
THIN	5.90	5.80	00.	8.20	8.80	99.	1.46	00.	.83	00.	1.50	00.
ZITCH	5.30	5.89	5.79	6.68	8.35	8.73	7.12	5.06	3.04	2.08	2.50	1.60
CNICE	.081	.074	.077	.083	.089	.084	.075	.058	.045	.049	.025	000.
XLBEL	497.00	493.00	468.00	496.40	497.70	498.60	491.50	497.50	499.20	499.10	503.30	501.00
CHBW	63.30	294.94	168.89	215.87	191.60	219.27	168.39	145.00	183.03	185.00	157.17	190.08
XLCH	00.	1475.00	1520.00	2150.00	1520.00	1400.00	1375.00	2170.00	1265.00	1390.00	3030.00	800.00
10K*S	10.94	72.60	6.49	4.39	5.41	35.48	5.99	5.37	1.29	1.88	3.24	.51
DEPTH	28.60	10.95	15.18	15.93	17.15	14.75	15.37	15.21	17.54	16.65	14.87	10.09
VCH	3.00	3.05	1.25	.93	. 87	2.62	1.56	1.95	1.32	1.42	2.16	1.74
CWSEL	490.00	493.35	495.78	496.73	497.45	498.95	500.57	501.71	502.04	502.25	502.97	503.08
SECNO	1.06	2.54	4.06	6.21	7.73	9.13	10.50	12.67	13.94	15.33	18.36	19.16

NS = 12 MS = 150

APPENDIX I. SAMPLE OF ICETHK OUTPUT FILE LAST.SMP

SUMPO file produced from WINDN.DAT

RNICE	0000.	0000.	.0000	0000.	0000.	0000.	0000.	0000.	0000.	0000	0000.
LNICE	0000.	.0631	0000.	.0000	.0000	0000.	.0000	.0000	0000.	.0000	0000.
ZITR	00.	00.	00.	00.	00.	1.50	1.20	00.	1.50	1.50	1.50
ZITL	00.	2.50	00.	00.	00.	1.50	1.70	1.50	1.50	.40	1.50
THIN	00.	00.	00.	00.	00.	00.	00.	00.	00.	00.	00.
ZITCH	00.										
CNICE	.049	.076	.075	.078	.088	.085	.076	.064	990.	.078	.089
XLBEL	497.00	488.00	496.40	497.70	498.60	491.50	497.50	499.20	499.10	503.30	501.00
CHBW	69.89	169.89	221.82	196.27	216.37	166.30	144.66	182.31	185.00	151.73	187.76
XLCH	.00	1520.00	2150.00	1520.00	1400.00	1375.00	2170.00	1265.00	1390.00	3030.00	800.00
10K*S	3.42	11.19	2.00	3.07	63.77	9.65	10.73	2.08	3.41	21.56	15.43
ОЕРТН	28.60	15.82	16.40	17.26	14.42	16.01	16.72	19.28	18.53	18.12	14.75
VCH	2.55	1.82	. 85	88.	3.03	1.60	2.11	1.31	1.52	2.64	1.68
CWSEL	490.00	496.42	497.20	497.56	498.62	501.21	503.22	503.78	504.14	506.22	507.75
		9	-	m	n	0	7	4	23	18.36	بو

NS = 12 MS = 150

APPENDIX J. SAMPLE SPREADSHEET CREATED FROM ICETHK OUTPUT FILE QP.DAT

									_	
SCNO	XCHL	DPTH1	VCH1	CWSL1	CSLP1	ZTCH1	DPTH2	VCH2	CWSL2	
1.06	0	28.6	2.34	490 0	.000141	1.5	28.6	2.48	490	
2.54	1475	8	2.33	490.42 0	.000859	1.5	8.6	2.58	491.02	
4.06	1520	10.9	2.48	491.52 0	.000621	1.5	13	2.19	493.6	
6.21	2150	11.6	1.94	492.45 0	.000312	1.5	13.8	1.33	494.6	
7.73	1520	12.7	2.34	493.02 0		1.5	14.9	1.74	495.15	
			2.29	493.74 0		1.5	11.9	1.87	496.06	
9.13	1400	9.6	2.29	473.74 0	.000333					
10.5	1375	9.4	2.86	494.58 0	.000763	1.5	12.1	2.16	497.26	
12.67	2170	9.9	3.39	496.45 0	.001037	1.5	13	2.39	499.47	
13.94	1265	12.7	2.06	497.19 0	.000272	1.5	15.7	1.63	500.19	
15.33	1390	12	2.29	497.64 0	.000397	1.5	15.1	1.78	500.7	
18.36	3030	11.5	3.46	499.56 0	.001245	1.5	14.6	2.49	502.72	
19 16	800	7.6	3.1	500.6 0	.001241	1.5	10.6	2	503.58	

ZTCH3	CSLP3	CWSL3	VCH3	DPTH3	ZTCH2	CSLP2
2.8	0.000324	490	2.52	28.6	2.5	0.000294
3	0.004267	491.16	2.74	8.8	2.6	0.003306
2.9	0.000997	493.96	2.17	13.4	2.6	0.001009
2.4	0.000242	494.91	1.27	14.1	2.1	0.000261
2.6	0.00045	495.38	1.62	15.1	2.7	0.00058
2.9	0.000805	496.19	1.91	12	2.6	0.000753
3.6	0.001094	497.43	2.16	12.2	3.3	0.0011
3.6	0.001402	500.01	2.6	13.5	2.5	0.001004
3.2	0.000345	500.86	1.64	16.4	2.4	0.000319
3	0.000405	501.38	1.71	15.8	2.6	0.000452
3.5	0.00133	503.39	2.57	15.3	2.5	0.001106
4.4	0.001577	504.6	2.17	11.6	2.5	0.000934

APPENDIX K. TYPICAL SPREADSHEET FILE PRODUCED FROM ICETHK OUTPUT FILE PROFILE.DAT

SECNO	LENGTH	BEDEL	BODICE	CWSEL	ICEVOL
1.06	0	461.4	487.25	490	0
2.54	1475	482.4	488.39	491.23	828552
4.06	2995	480.6	491.36	494.01	2144273
6.21	5145	480.8	492.88	494.9	3520168
7.73	6665	480.3	493.3	495.32	4194303
9.13	8065	484.2	493.34	496.08	4954086
10.5	9440	485.2	494.31	497.33	5798405
12.67	11610	486.5	496.67	499.78	7044881
13.94	12875	484.5	497.66	500.68	7804235
15.33	14265	485.6	497.69	501.35	8787415
18.36	17295	488.1	499.64	504.58	11290330
19.16	18095	493	500.52	506.1	12270670

APPENDIX L. LISTING OF OUTPUT FILES INCLUDED IN THIS RELEASE OF THE ICETHK PROGRAM

	<d:< td=""><td>IR></td><td>10-22-96</td><td>9:45a</td></d:<>	IR>	10-22-96	9:45a
	<d3< td=""><td>IR></td><td>10-22-96</td><td>9:45a</td></d3<>	IR>	10-22-96	9:45a
BATINFO		288	10-22-96	10:08a
MAIN	BAT	99	07-17-92	12:14p
MAKE	BAT	740	10-22-96	10:07a
WRITE	BAT	222	10-22-96	10:08a
FWJ4700	DAT	36,217	02-16-94	8:22a
PARA	DAT	3,919	05-20-94	1:48p
RUFMULT	DAT	1,906	04-19-94	8:26a
TOSTON	DAT	9,671	02-10-94	2:02p
WINDN	DAT	22,497	05-20-94	2:55p
BIGBAT	EXE	22,967	07-15-92	11:20a
BLDBAT	EXE	24,015	07-15-92	10:33a
FICETHK	EXE	209,096	07-24-96	12:21p
HEC2	EXE	392,256	07-03-95	10:50a
START	EXE	23,807	11-09-92	3:52p
H	OUT	36,718	10-22-96	10:08a
PARA1	DAT	3,929	10-22-96	10:08a
FIRST	SMP	2,092	10-22-96	10:07a
TEMP	STO	27,054	10-22-96	10:08a
OBRUF	DAT	504	10-22-96	10:08a
TEMP	DAT	11,074	10-22-96	10:08a
QP	DAT	2,457	10-22-96	10:08a
FIN	DAT	2,648	10-22-96	10:08a
PROFILE	DAT	851	10-22-96	10:08a
LAST	SMP	2,092	10-22-96	10:08a
26	file(s)		337,119 by	-
		146,6	85,952 by	tes free

REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestion for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.

1. AGENCY USE ONLY (Leave blank)	2. REPORT DATE September 199		YPE AND DATES COVERED
4. TITLE AND SUBTITLE	ocptember 133	<u> </u>	5. FUNDING NUMBERS
ICETHK User's Manual: V	Version 1		
6. AUTHORS	Civil Works Program		
Andrew M. Tuthill , James	L. Wuebben, and John J. Gag	gnon	Work Unit 32822
7. PERFORMING ORGANIZATION NAM	ME(S) AND ADDRESS(ES)		8. PERFORMING ORGANIZATION
U.S. Army Cold Regions R	desearch and Engineering Lab	oratory	REPORT NUMBER
72 Lyme Road		,	Special Report 98-11
Hanover, New Hampshire	03755-1290		
9. SPONSORING/MONITORING AGENC	CY NAME(S) AND ADDRESS(ES)		10. SPONSORING/MONITORING
Office of the Chief of Engir	neers		AGENCY REPORT NUMBER
Washington, D.C. 20314-10			
11. SUPPLEMENTARY NOTES			
For conversion of SI units to	published by the American Soc		E380-93, Standard Practice for Use of the aterials, 100 Barr Harbor Drive, West
12a. DISTRIBUTION/AVAILABILITY STA			12b. DISTRIBUTION CODE
Approved for public relea	se; distribution is unlimited.		
Available from NTIS, Spri	nofield. Virginia 22161		
13. ABSTRACT (Maximum 200 words)			
model to simulate equilibr require the calculation of ic	ium ice jam profiles. The ICI	ETHK model fulfills a ort presents the theo	ction with the HEC-2 backwater an important need in studies that ry and limitations of ICETHK and ling using ICETHK.
14. SUBJECT TERMS			15. NUMBER OF PAGES
Equilibrium ice jam HEC-2	Ice-affected stage Ice jam thickness		16. PRICE CODE
17. SECURITY CLASSIFICATION OF REPORT	18. SECURITY CLASSIFICATION OF THIS PAGE	19. SECURITY CLASSIFIC OF ABSTRACT	ATION 20. LIMITATION OF ABSTRACT
UNCLASSIFIED	UNCLASSIFIED	UNCLASSIFIEI) UL